USER MANUAL

Ecoplus Pro Water Purifier

5-stage reverse osmosis · 75 GPD · 10" filter housings · With / without pump

5 stages
Filtration



3-04-EPRO

Made in Türkiye

Contents

2 Safety

3 Working principle, specifications

4 Box contents, preparation

5 Parts and functions

6 Water path and installation

8 First start-up

9 Maintenance and filter change

10 Membrane change, storage

11 Troubleshooting

12 Maintenance log

Read the whole manual before installing the unit and keep it near the unit. This manual covers both the pump and the non-pump version; information that applies only to the pump version is marked “Pump model”.

01 Safety

Cold water only

Feed water must be 5–38 °C. Do not connect the unit to a hot water line.

Mains water

Use microbiologically safe mains water. Well and spring water need pre-treatment.

Pressure

If mains pressure is above 7 bar, use a pressure reducer.

Location

Choose a dry, level place protected from frost and direct sunlight.

Electricity

Pump model: Plug the adapter into an earthed socket. Do not touch it with wet hands; do not run the unit if the cable is damaged.

Close the valve

Close the valve (on the pump model also unplug the adapter) before maintenance, when away for a long time or in case of a leak.

Users

The unit must not be used by children or persons with limited abilities.

Repairs

Repairs must be done by an authorised service. Use original parts and filters only.

CAUTION

Do not use bleach, solvents or abrasive products for cleaning. They damage the membrane.

02 Working principle

Reverse osmosis forces water under pressure through a very fine membrane. Dissolved salts, heavy metals and other contaminants cannot pass and are sent to the drain with the reject water.

The Ecoplus Pro **has a storage tank**: purified water is stored in the pressure tank and comes from the tank when you open the faucet. When the tank is full, the shut-off valve closes the feed water (on the pump model the high-pressure switch also stops the pump) and the unit stops.

Water is purified
Water passes the pre-filters and the membrane; reject water goes to the drain.

→

Stored in the tank
Purified water collects in the pressure tank.

→

Served at the faucet
Water passes the final filter on its way to the faucet.

03 Specifications

Stock code	**3-04-EPRO**
Filtration	5 stages
Frame	Plastic
Filter housing	10" spring-type housing
Tank	12 L metal tank (3.2 gal), external
Valve	Shut-off valve
Pressure gauge	10 bar
Unit size	250 × 390 × 430 mm
Package / weight (No pump)	275 × 430 × 485 mm · 7.10 kg
Package / weight (With pump)	275 × 430 × 485 mm · 12 kg
Package / weight (3.2 G tank)	280 × 280 × 365 mm · 3.72 kg

FEED WATER CONDITIONS	
Feed pressure (no pump)	3–7 bar
Feed pressure (with pump)	0.2–7 bar
Feed water temperature	5–38 °C (41–100 °F)
Feed water TDS	Max. 500 ppm
Feed water pH	3–11
Hardness	Max. 20 °F
Pump supply	24 V DC (via adapter)

* Nominal value at 25 °C. Output varies with water temperature, pressure and TDS. Lower output with cold water in winter is normal.

04 Box contents

1 Purification unit
filters and membrane fitted




2 Purified water faucet




3 Connection tubing




4 Feed water valve



5 Pressure tank



6 Pump adapter (pump model)



7 User manual



The membrane may come fitted or packed separately. If separate, fit it before installation (page 10).

05 Before installation

- ☐ I chose a level, dry, frost-free place out of direct sunlight, with enough room to change the filters.
- ☐ Pump model: there is an earthed socket nearby, protected from splashes.
- ☐ Mains pressure is between 3–7 bar. If higher, I have a pressure reducer.
- ☐ Below 3 bar mains pressure the pump model must be used.

OBTAIN SEPARATELY
Drain saddle (clamp) · pressure reducer (recommended)

TOOLS NEEDED
Drill, 5 and 12 mm bits, spanner or adjustable wrench, PTFE tape, cutter

06 Parts and functions

Numbers match the water path diagram (page 6); the tag shows where the part is found.

INLET AND PRE-FILTRATION

1. **Feed water valve** Takes water from the cold water line to the unit. Close it for maintenance and when the unit is not used for a long time.
2. **Pressure reducer** Keeps mains pressure steady and safe and protects the unit from pressure surges. **Not included. Mandatory if mains pressure is above 7 bar.**
3. **10" Sediment 5 µm** Retains sand, rust and sediment. Replace: 6–12 months.
4. **10" GAC Carbon** Reduces chlorine, taste and odour. Replace: 6–12 months.
5. **10" CTO Carbon** Reduces residual chlorine and organics. Replace: 6–12 months.

PRESSURE AND CONTROL

6. **Shut-off valve** Closes the feed water automatically when the tank is full, so no water runs to the drain while the unit is idle.
7. **Low-pressure switch** Stops the pump when water is cut off or pressure is too low, so the pump never runs dry.
8. **Pump** Raises the water pressure to the level the membrane needs and keeps production going at low mains pressure.
9. **Pressure gauge** Shows the operating pressure. A marked drop means the pre-filters are clogging.

PURIFICATION

10. **75 GPD Membrane Filter** Separates dissolved salts and contaminants. Replace: 12–24 months.
11. **Flow restrictor** Builds the pressure the membrane needs and limits reject water. The unit cannot purify if it is removed.
12. **Check valve** Prevents water in the tank from flowing back to the membrane.
13. **High-pressure switch** Stops the pump when the tank is full or the faucet is closed and restarts it as water is drawn.

STORAGE AND OUTLET

14. **Pressure tank and tank valve** Stores purified water under pressure. The tank valve must be open in use.
15. **2" Inline Post Carbon (Quick-connect)** Polishes taste and odour as the final stage. Replace: 6–24 months.
16. **Purified water faucet** Supplies purified water only.

07 Water path and installation


Water flows through the unit in this order. Numbers match the parts list (page 5).

1. Feed water valve
2. Pressure reducer
3. 10" Sediment 5 µm
4. 10" GAC Carbon
5. 10" CTO Carbon
6. Shut-off valve
7. Low-pressure switch
8. Pump
9. Pressure gauge
10. 75 GPD Membrane Filter
11. Flow restrictor
12. Check valve
13. High-pressure switch
14. Pressure tank and tank valve
15. 2" Inline Post Carbon (Quick-connect)
16. Purified water faucet


Reject water: From the membrane to the drain

STEP 1 Water inlet ①


A Close the cold water angle valve under the sink.

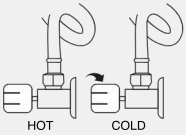


B Remove the flexible hose from the angle valve.



C Fit the feed water valve in between with its gaskets and tighten.




D Connect the unit's inlet tubing to the valve.

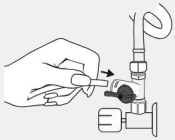


* If a pressure reducer is used, fit it between the valve and the unit.

STEP 2 Faucet


A Drill the worktop with a 5 mm, then a 12 mm bit. Use a diamond bit on marble and granite, an HSS bit on steel sinks.

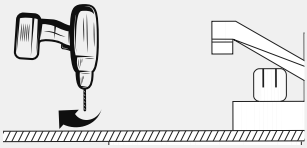


B Fit the parts in this order and tighten the nut.

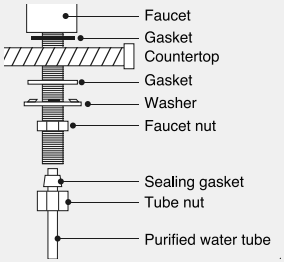

C Connect the purified water tubing to the faucet with the nut and insert.

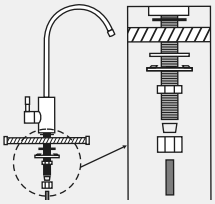

STEP 3 Reject water

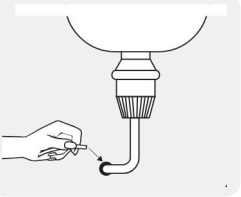

Fit the drain saddle (clamp) to the sink drain pipe, **above the trap**. Drill the pipe through the clamp hole and connect the reject water tubing.

The tubing must not kink and must slope down to the drain. Do not remove the flow restrictor.

STEP 4 Pressure tank

Wrap PTFE tape on the tank thread and fit the tank valve by hand. Connect the tank tubing to the valve and stand the tank upright next to the unit.

STEP 5 **Connections**


UNIT CONNECTION	CONNECT TO
Water inlet	Feed water valve / pressure reducer
Tank outlet	Tank valve
Purified water (final filter outlet)	Faucet
Reject water (flow restrictor outlet)	Drain saddle




- Cut the tubing to length **squarely** with a cutter.
- Push the tubing fully into the fitting. Pull back gently to check it is seated.
- Pump model: plug in the adapter only after all water connections are complete.

08 First start-up

A Open the valve. Check the filters and connections for leaks.

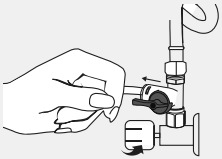

B Open the tank valve and wait for the tank to fill (about 1–2 hours). Drain **the first full tank** completely through the faucet.

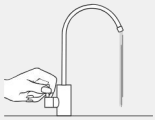

- When the tank has filled again, the unit is ready for use.
- A white, milky look in the first days is air and clears by itself.
- If the unit has not been used for more than 2 days, discard the first 1–2 minutes of water.

09 Maintenance and filter change

STAGE	FILTER	FUNCTION	REPLACE
1	10" Sediment 5 µm	Retains sand, rust and sediment	**6–12 months**
2	10" GAC Carbon	Reduces chlorine, taste and odour	**6–12 months**
3	10" CTO Carbon	Reduces residual chlorine and organics	**6–12 months**
4	75 GPD Membrane Filter	Separates dissolved salts and contaminants	**12–24 months**
5	2" Inline Post Carbon (Quick-connect)	Polishes taste and odour as the final stage	**6–24 months**

Intervals depend on water quality and use and are shorter with heavy use. Less water or a change in taste means it is time to replace. Replace the filters at least every 12 months.

Cartridges in housings (10")


1. Close the valve (on the pump model also unplug the adapter). Open the faucet to release pressure.
2. Place a bowl or cloth under the housing. Unscrew the bowl with the housing wrench, anticlockwise seen from below.
3. Remove the old cartridge with gloves and bag it. Wash the bowl with lukewarm water and a little dish soap, then rinse.
4. Seat the O-ring properly in its groove; replace it if damaged.
5. Centre the new cartridge in the bowl. Tighten the bowl by hand, then lightly with the wrench.
6. Open the valve slowly and check for leaks. Run water from the faucet for 10 minutes.

Inline filters (quick-connect)


1. Close the valve and the tank valve (on the pump model also unplug the adapter). Open the faucet to release pressure.
2. Press the collets at both ends of the filter and pull the tubing out.
3. Fit the new filter **with the arrow pointing in the direction of flow** and push the tubing fully in.
4. Open the valves and check for leaks. Discard the first 10 minutes of water.

10 Membrane change


A Remove the tubing and open the cap in the direction of the arrow.

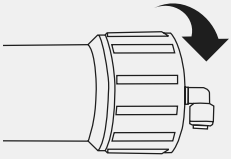

B Push the new membrane in, O-ring end first.

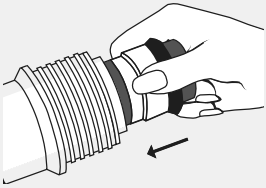

C Close the cap firmly in the direction of the arrow.

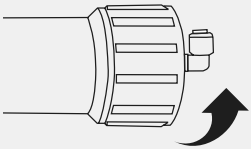

1. Close the valve (on the pump model also unplug the adapter) and open the faucet to release pressure.
2. Pull the old membrane out with pliers and clean the inside of the housing.
3. When fitting the new membrane, the black brine seal must be **on the cap side**.
4. Turn the water on (on the pump model plug in the adapter), discard the first **15 minutes** of water; on tank units drain the first full tank and check for leaks.

11 Cleaning and storage

- **Cleaning:** wipe the outside with a damp cloth. Disinfection by an authorised service once a year is recommended.
- **Not used for over a month:** close the valve (on the pump model also unplug the adapter) and empty the tank through the faucet. Before using again, replace the filters and have the unit disinfected.
- **Transport:** close the valve and drain the unit. Carry it upright; protect it from impact, heat, moisture, dust and sunlight. Do not store where it can freeze.
- **Disposal:** bag used filters and tie them closed; do not cut or open the membrane. Take the pump and electrical parts to an e-waste collection point.

12 Troubleshooting

PROBLEM	POSSIBLE CAUSE	SOLUTION
No water or little water	Valve or tank valve closed	Open the valves.
	Pre-filters clogged	Replace the pre-filters.
	Tubing kinked or crushed	Straighten the tubing.
	Cold feed water (winter)	Normal; output rises as the water warms.
Tank does not fill	Low mains pressure	Check the pressure; below 3 bar the pump model is needed.
	Membrane clogged	Replace the membrane.
Water runs to the drain when the tank is full	Shut-off valve or check valve faulty	Close the valve and contact service.
Pump does not run	Adapter unplugged, no power	Check the plug and socket.
	No water or valve closed	Check the valve and the mains water.
	Switch, adapter or pump fault	Contact service.
Pump runs continuously or cycles on and off	Faucet not fully closed or a leak in the line	Check the faucet and connections.
	High-pressure switch faulty	Contact service.
Milky water, foam	Air in the system	Normal; clears shortly.
Bad taste or odour	Filters at end of life	Replace the filters.
	Not enough water run after installation or a change	Drain the first tank or run the faucet for 15 minutes.
Leaks at connections	Tubing not pushed fully in or cut at an angle	Cut the tubing square and refit.
	Seal out of place	Seat or replace the seal.
Noise from the unit	Uneven floor or unit touching the cabinet	Place the unit on a level surface, clear of anything.

IF THE PROBLEM PERSISTS
Close the valve, unplug the adapter and contact an authorised service.

13 Maintenance log

MODEL

☐ Without pump ☐ With pump

SERIAL NO

INSTALLATION DATE

.... / .... / .....

INITIAL OUTLET TDS

ppm

DATE	STAGE REPLACED (✓)					OUTLET TDS	BY / SIGNATURE
	1	2	3	4	5		

Keep this manual near the unit.

HSC Water · hscwater.com · +90 (212) 914 14 34

Made in Türkiye